 




OWNER'S MANUAL

OIL FILLED RADIATOR

MODEL: NY-13AL

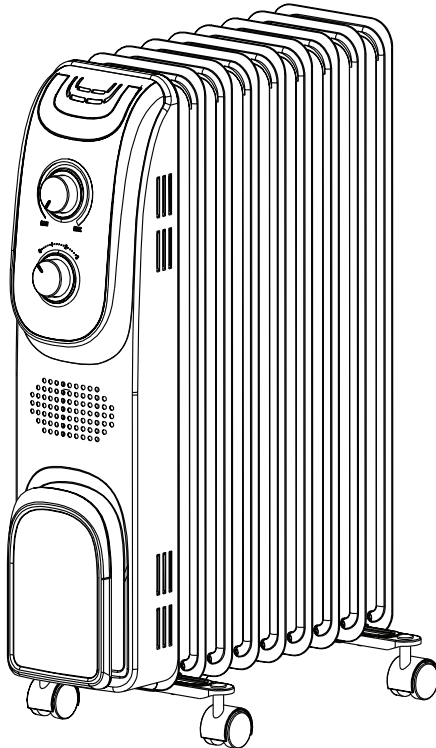


READ AND SAVE THESE INSTRUCTIONS


Attention: Pictures in the IM are for reference only.

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons , including the following:

1. Read all instructions before using heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the heater. Allow heater to cool before moving and then use the built-in handle for easy movement.
3. Extreme caution is necessary when heater is used by or near children and whenever heater is left unattended.
4. Always unplug the heater when it is not in use.
5. Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, or has been dropped or damaged in any manner. Return heater to the manufacturer for examination, electrical or mechanical adjustment, or repair.
6. Do not use heater outdoors. This product is intended for normal household indoor use only.
7. This heater is not intended for use in bathrooms, laundry areas or similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
9. To disconnect heater, set controls to OFF, then remove plug from outlet.

10. Keep this heater clean. DO NOT allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire, or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14.  Warning: In order to avoid overheating, do not cover the heater.
15. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
16. The heater must not be located immediately below a socket-outlet.
17. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

19.	Correct Disposal of this product
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

20. This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.

 
21. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

22. CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

23. This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.

**WARNING: IN ORDER TO AVOID OVERHEATING,
DO NOT COVER THE HEATER.**

PART FIGURE

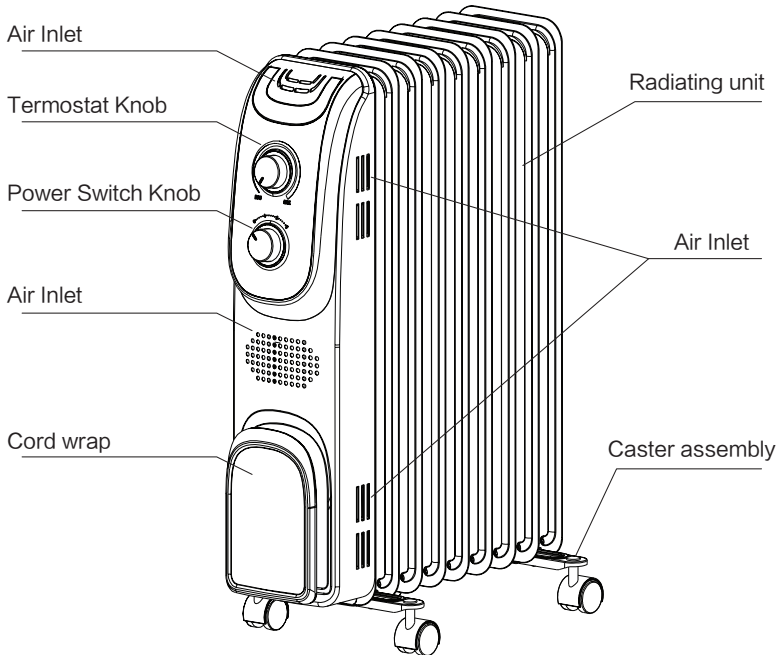


ASSEMBLY INSTRUCTIONS

Unpack your heater and find the wheel-holding plate and butterfly nuts between the fins assemblies .

1. Make sure the heater is unplugged and in the "OFF" position.
2. **TURN THE HEATER UPSIDE DOWN.**
3. Attach the wheel-holding plates onto the heater as Fig.1 shows. The U plate is fixed between the last tow fins and the other one is fixed under metal control box. Fix the castors to the vertical axis of both the wheel holding plates.
4. Insert the butterfly nuts and tighten them securely.
5. **TURN THE HEATER UPRIGHT.**

 Your heater is now ready to use .

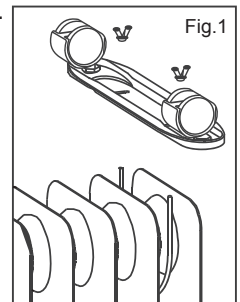

⚠ WARNING: Risk of fire. Do not operate heater without wheel assemblies attached. Operate heater in upright position only (wheels on bottom, controls on top). Any other position could create a hazardous situation. Ensure that the surface beneath the heater is clean and free of any obstructions. It is not recommended that this heater be placed on high-pile carpeting or any other surface that impedes the flow of air underneath the heater.

This heater include an a visual alarm to warn that parts of the heater are getting excessively hot. If the alarm flashes, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. DO NOT OPERATE THE HEATER WITH THE ALARM FLASHING.

OPERATING INSTRUCTION

1. Plug in the heater.
2. Turn the thermostat knob to the maximum position.
3. Switch the heater on by setting the power switch to the desired heat setting.
 - 1 — Low heat 2— Medium heat 3 — High heatThe power indicator light will illuminate.
4. When the room has reached the required temperature, turn the thermostat knob slowly anticlockwise until the power indicator light go out (or until a click is heard).
5. Turn the thermostat knob to this position to set the desired temperature.
The power indicator light will turn on and off, indicating the thermostat is keeping room temperature at the selected setting.
6. To turn the heater off, set the power switch to the “0” position and remove plug from the mains socket.

NOTE: The heater features a tip-over switch. If the heater tips over, it will automatically switch off. Once placed back into the upright position, the heater will automatically switch on again.

Overheat protection

The heater is equipped with a safety device. The safety device will trip and turn the heater off in the event of overheating.

CLEANING AND MAINTENANCE INSTRUCTION

1. The electric heater should be cleaned regularly to wipe out the dust on the surface of flanges. As this may influence the radiating efficiency.
2. Disconnect electricity supply and allow radiator to cool, wipe out dust with a soft damp cloth. Do not use detergent or abrasives.
3. Do not scrap the surfaces of flanges with sharp hard tools, to avoid surfaces getting rusty, because of damage of the paint coat.

MAIN TECHNOLOGY SPECIFICATIONS

Power supply: AC220-240V ~ 50Hz

MODEL	POWER REGULATION RANGE (W)		
	LO	MED	HI
NY1507-13AL	600	900	1500
NY2009-13AL	800	1200	2000
NY2311-13AL	1000	1300	2300
NY2511-13AL	1000	1500	2500