


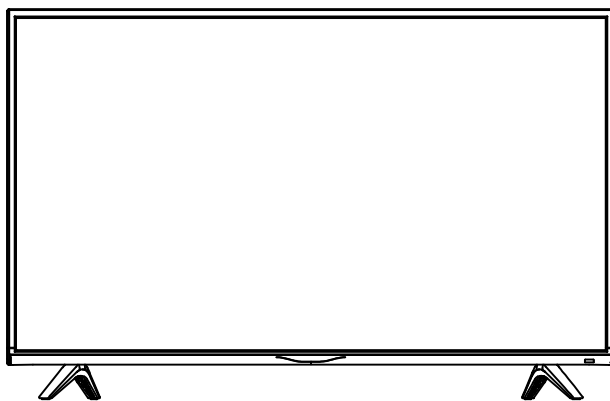

LED TV

OTD32EH315A6  
OTD39EH315A6

OWNER'S MANUAL




---

Please read this manual carefully before TV operation.  
Retain it for future reference.

## Important Safety Instructions and Maintenance

### Important Safety Instructions

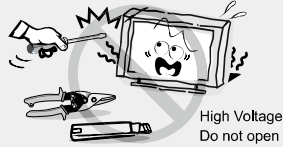

#### **CAUTION**

Risk of electronic shock, do not open. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



The screen and cabinet get warm when the TV is in use. This is not a malfunction. In case of smoke, strange noise or strange smell from the unit:

- Turn off the power switch immediately;
- Disconnect the power plug from the power outlet;
- Contact your dealer or service centre. Never attempt to make repairs yourself because this could be dangerous.



If the following problems occur:

Turn off the TV set and unplug the AC power cord immediately if any of the following problems occur. Ask your dealer or service centre to have it checked by qualified service personnel.

When:

- AC power cord is damaged.
- Poor fitting of AC power outlet.
- TV set is damaged by being dropped, hit or having something thrown at it.
- Any liquid or solid object falls through openings in the cabinet.

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the set. Use special caution in households where children are present. The apparatus is not suitable for children under 3-year to operate.



Do not overload wall outlets, extension cords or adaptors beyond their capacity, this can result in fire or electrical shock. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug

end, adaptors and the point where they exit from the appliance. The mains plug is used as the disconnect device. It shall remain readily accessible and should not be obstructed during intended use. Make sure to plug the power cord in until it is firmly inserted. When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet, do not pull the plug out by the wire. NEVER touch the plug or power cord with wet hands. To disconnect the apparatus from the mains power, the plug must be pulled out from the mains socket, therefore make sure the mains plug is always easily accessible.



Do not push or scratch the front filter, or place any objects on top of the TV set. The image may be uneven or the screen may be damaged.

To avoid the fire, no naked flame source, such as lighted candles, should be placed on the apparatus.



## Important Safety Instructions and Maintenance

### Installation



When the TV being moved in from cold place, it needs some right time for dew inside unit evaporating fully before turn on the unit;



To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

### LED Screen

Although the LED screen is made with high precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue or green) may appear constantly on the LED screen. This is a structural property of the LED screen and is not a malfunction. If the surface of the LED panel cracks, do not touch it until you have unplugged the AC power cord. Otherwise electric shock may result. Do not throw anything at the TV set. The LED panel may break from the impact and cause serious injury.

### Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen. Do not display still images and partially still images on the LED panel for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.

Watching the LED TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen.

Damages caused by the above effect are not covered by the Warranty.

Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.


### Cleaning

Cleaning and handling the screen surface and cabinet. Disconnect the unit from the AC outlet before cleaning. To remove dust, wipe gently with a soft, lint free cloth. If required use a slightly damp cloth.



### MAINS PLUG

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

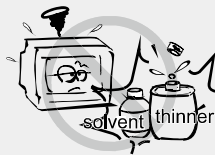

Use care not to subject the TV's surfaces to detergent. (A liquid inside the TV could lead to product failure, fire or electrical shock.) Use care not to subject surfaces to bug repellent, solvent, thinner, or other volatile substances as this may deteriorate the surface and finish of the cabinet.

## Important Information

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.
- Keep small accessories out of reach of children so they are not mistakenly swallowed.

## Table of Contents


<b>Accessories</b> .....	5
<b>Introduction</b> .....	6
Features.....	6
Specifications.....	7
<b>Stand and wall-mounting instructions (optional)</b> .....	8
<b>General Description</b> .....	9
Overview of front panel.....	9
Overview of back panel.....	10
Overview of remote control.....	11
Installing Batteries in the Remote Control.....	13
<b>External Connection</b> .....	13
Antenna connection.....	13
<b>Basic operation</b> .....	14
Turning the TV on and off.....	14
<b>Menu system instruction</b> .....	15
Select Input Source.....	15
First Time Installation.....	15
<b>Main Menu Operation</b> .....	16
Channel .....	16
Picture.....	19
Sound .....	21
Time .....	22
Lock .....	24
Setup .....	25
Hotel.....	28
<b>Media Operation</b> .....	29
USB.....	29
Photo.....	31
Music .....	31
Movie .....	32
Text .....	34
<b>Troubleshooting</b> .....	36

## Accessories

Please make sure the following items are included with your LED TV. If any items are missing, contact your dealer.



Remote Control

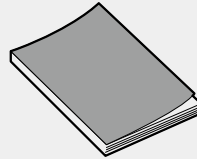

Owner's  
Instructions

## Introduction

### Features

- TV adopts 32"/39" TFT LED display screen
- Zero X radiation complies to green environment protection requirement
- Connect to computer directly to realize TV/monitor combo.
- Support USB
- 16:9 wide screen
- Auto tuning and fine tuning
- Support HDMI
- Programmable sleep timer
- Wide range voltage input
- No-signal automatic power off

### Input terminals used for external equipment connection

- 1 × RF In
- 1 × DVB-S/S2
- 2 × AV input
- 1 × Coaxial
- 3 × HDMI
- 2 × USB
- 1 × Headphone output
- 1 × VGA&PC-Audio input

## Introduction

### Specifications

Model	OTD32EH315A6	OTD39EH315A6	
Display size	32" Diagonal(max.)	39" Diagonal(max.)	
LED panel resolution	1366x768		
Speaker output power	≥ 5Wx2		
Power supply	110-240V~, 50/60Hz		
TV receive system	Digital: DVB-T/T2/S2/C/CI+ Analog: PAL: DK I BG SECAM: DK BG		
Frequency range	Analog: Antenna:42.75MHz~869.25MHz Digital: DVB-T/T2: 170MHz~860MHz DVB-C: 113MHz~860MHz DVB-S/S2: 950MHz~2150MHz		
Video in	NTSC 3.58/NTSC 4.43		
Power consumption	55W	70W	
Standby consumption	≤ 0.5W		
Antenna Input	75 ohms, unbalanced		
Controller power	DC 3V (Two AAA size batteries)		
Dimensions (LxWxH)	TV with stand	731.8×187.8×476.7mm	889.1×244.6×572.4mm
	TV without stand	731.8×87.3×435.1mm	889.1×91.6×519.6mm
Weight (Net weight)	TV with stand	4.3Kg	6.4Kg
	TV without stand	4.23 Kg	6.3 Kg
Work Temperature	0°C-40°C		

#### NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

## Stand and wall-mounting instructions (optional)

### How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.


-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.


### Assembling instruction:

Put the television on the table, fix the stands with four screws given in the carton.

Step1: Take out two stands from package, and insert them into bottom of TV;

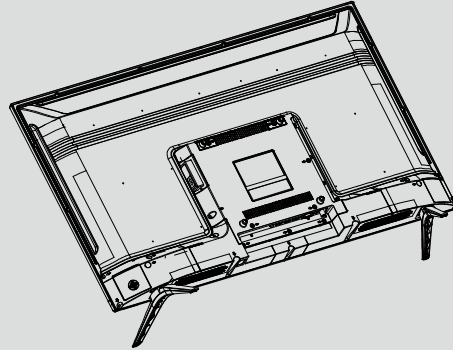

Step2: Take out four screws provided with TV set and tighten them into screw holes.

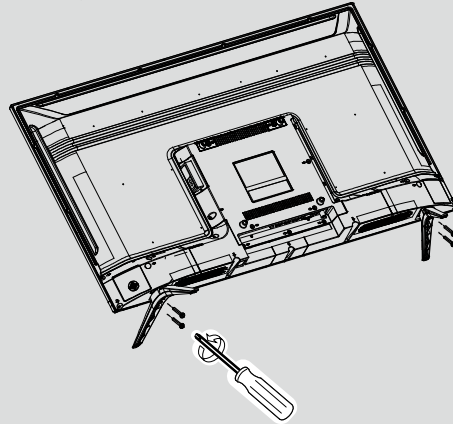




## General Description

### Overview of front panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

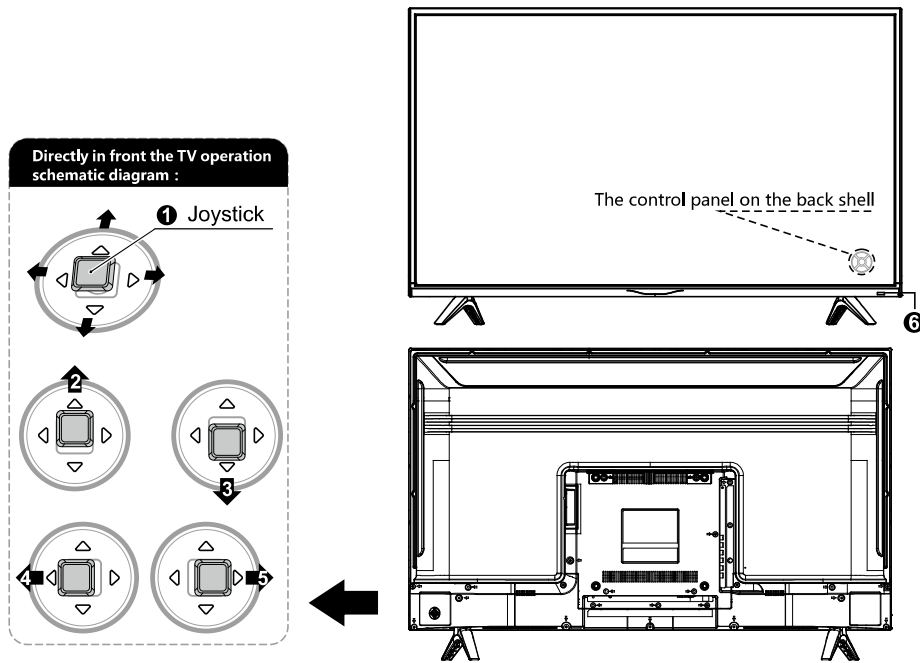


- 1** □ Centre    Press this button on the control panel one time as CONFIRM at any menu. Press and hold this button to display FUNCTION menu at any menu. Press and hold this button to turn on TV when it is in standby mode.
- 
- 2** ↑ Up    Push one time: Use to select menu item if menu on TV. Use to go to last channel when watching TV.
- 
- 3** ↓ Down    Push one time: Use to select the next menu item if menu on TV. Use to go to next channel when watching TV. Push and hold this button to return to the last page.
- 
- 4** ← Left    Push one time: Use to select the left menu item if menu on TV. Use to decrease volume when watching TV.
- 
- 5** → Right    Push one time: Use to select the right menu item if menu on TV. Use to increase volume when watching TV.
- 
- 6** Remote control sensor / Power indicator
-

## General Description


### Overview of back panel

You can connect the TV with video devices such as DVD/VCD player, VCR and video camera to enjoy the high quality picture.

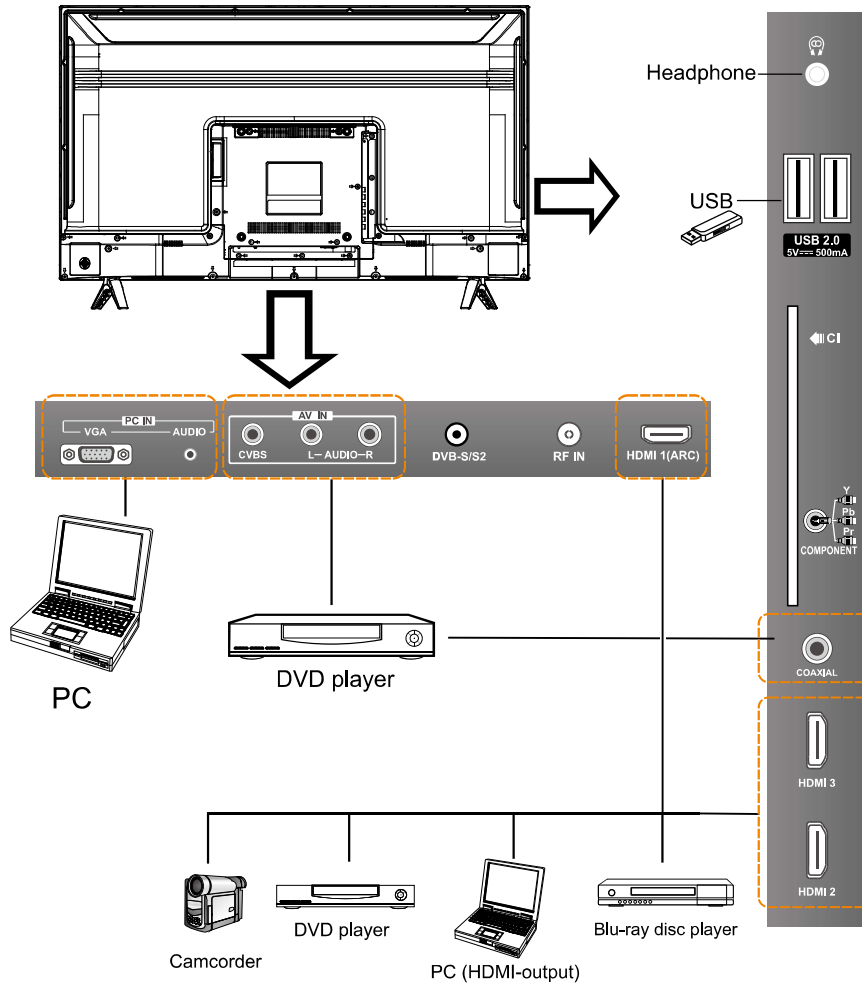

## General Description


### Overview of Remote Control

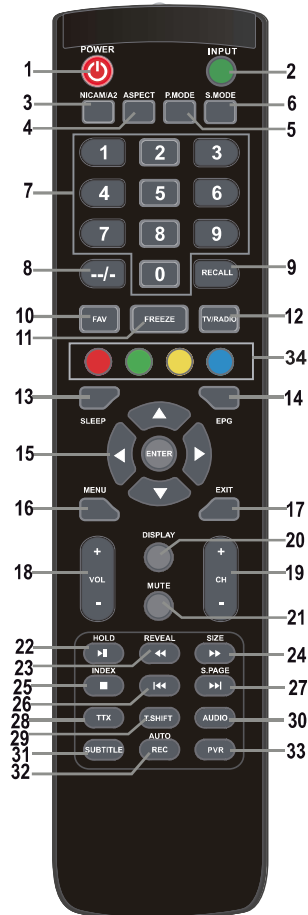

1. **POWER:** Press this button to switch to standby mode, and press it again to turn TV on.
2. **INPUT:** Press to select the input source.
3. **NICAM/A2:** NICAM/A2 input.
4. **ASPECT:** Press this button to switch the screen mode.
5. **P.MODE:** This button is used to adjust user picture mode, press this button repeatedly and select one of four settings.
6. **S.MODE:** This button is used to select the sound mode.
7. **Digital buttons(0~9):** To select channel with digital buttons.
8. **-/-:** Press this button to enter a program number different digits. e.g.-for1,--for11, ---for111.
9. **RECALL:** Switch to the previous program.
10. **FAV:** Press it to display favorite list.
11. **FREEZE:** Freeze the picture.
12. **TV/RADIO:** Switching between the TV and radio modes.
13. **SLEEP:** Let you select amount of time before your TV turn itself off automatically.
14. **EPG:** In DTV source, this button is used to start the EPG application.
15. **Arrow buttons/ENTER:** Press these buttons to move cursor up/down/left/right for menu. ENTER button is used to select the sound mode.
16. **MENU:** Press to enter or exit the setup menu.
17. **EXIT:** Press exit to exit menu or sub menu.
18. **VOL +/-:** Press to increase/ decrease the sound level.
19. **CH +/-:** Press to scan through or to select a channel.
20. **DISPLAY:** Button for displaying the source and information about channels.
21. **MUTE:** Press this button to shut off sound of the TV, press again to restore TV sound.
22. **HOLD/▶|| :** Hold button: hold the current display. In the media mode: playback/pause.
23. **REVEAL/◀◀ :** REVEAL button: press REVEAL to display or hide hidden teletext information(depends on the broadcast).  
◀◀ button: fast rewind.

## General Description


### Overview of Remote Control

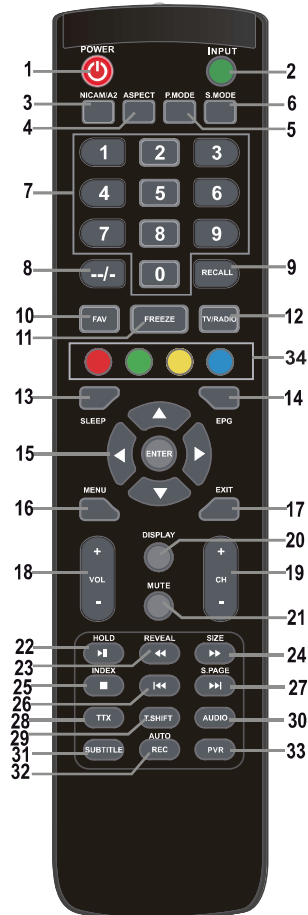

- 24. **SIZE/ ►►** : SIZE button: press size to change the size of the screen in the TTX mode.  
 ►► button: fast forward.
- 25. **INDEX/ ■** : Index button: call up a teletext content page.  
 ■ button: stop.
- 26. **◀◀** : In the media mode, skip to the previous track.
- 27. **S.PAGE/ ►►|** : S.PAGE button: press S.PAGE to enter a teletext sub page.  
 ►►| button: skip to the next track.
- 28. **TTX**: Turn teletext on or off.
- 29. **T.SHIFT**: It is used to start recording with a time shift. Function is only available in the DTV mode.
- 30. **AUDIO**: DTV mode: select a background sound, if available.
- 31. **SUBTITLE**: Press to switch the subtitles at the bottom of the screen, if they are available.
- 32. **AUTO/REC**: AUTO: Used for automatic configuration in the PC mode.  
 REC: Press to start recording. (only in the DTV mode).
- 33. **PVR**: It is used to enter/exit the PVR list menu.
- 34. **Red/Green/Yellow/Blue Command**: These four buttons are used to request linked buttons with the current menu/page.

## General Description

### Installing Batteries in the Remote Control

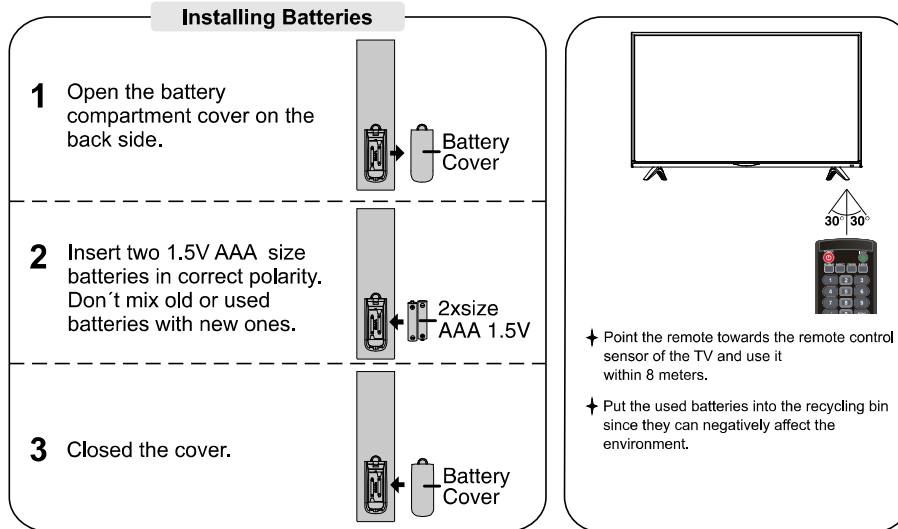

#### NOTES:


- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not exposed to excessive heat such as sunshine, fire or the like.

## External Connection


### Antenna connection

Antenna input impedance of this unit is 75ohm. VHF/UHF 75ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300ohm parallel flat feeder cable, you need to use the 300ohm/75ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

#### Antennas with 300 Ω flat twins Leads

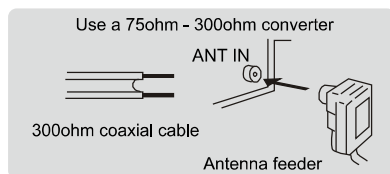

#### Antennas with 75 Ω Round Leads

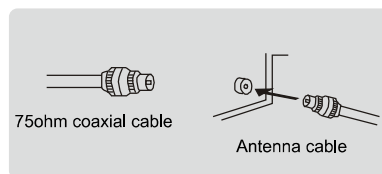


## Basic Operation

### Turning the TV On and Off

#### **How to turn the TV on or off**

1. Insert the power cord plug into a polarized AC outlet.
2. If TV is in standby mode, press **POWER** button on the remote control or  $\phi$  button on the back panel of LED TV.
3. Normal picture will be displayed on the screen after 15 seconds. If no signal input, "No Signal" will be displayed on the screen.
4. If temporary POWER off is required, press POWER button on the remote control or  $\phi$  button on the back panel.
5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.
6. After switching off the unit, you should wait at least 5 seconds before switching on again.

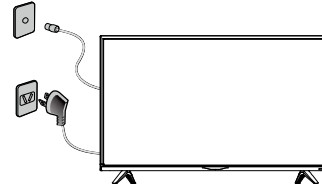

#### **Status indication lamp**

Red: In standby mode.

Green: In power on mode.

#### **Auto power-off**

1. If there is no signal, the TV will automatically enter standby mode after 15 minutes.

#### **Memory before turning TV off**

The picture and sound settings and preset channels will be memorized at the point when the TV is turned off. When the TV is started up again it will work accordingly with these settings.

## Menu system instruction

### Select Input Source

Press INPUT button to display the input source list.  
Press ▼ / ▲ or ENTER button to select the input source you want.  
Press ENTER button to enter the input source, press EXIT button to quit.  
(Options: Satellite, DTV, ATV, AV1, AV2, PC, HDMI1, HDMI2, HDMI3, Media)



### First Time Installation

Connect an RF cable from the TV's input called "RF-In" to your TV Aerial socket.


#### Select Language

Press ◀ / ▶ button to select the language to be used for menus and message.

#### Select Country

Press ▼ / ▲ button to highlight country menu.

Press ◀ / ▶ button to select the country you want to.

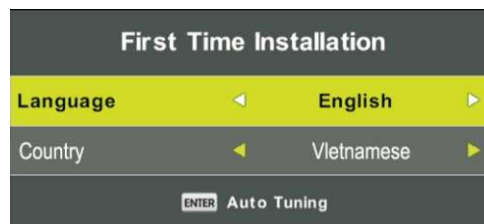

## Main Menu Operation

### Channel

The Channel list in DTV source.  
Press MENU button to display the main menu.  
Press ◀ / ▶ button to select CHANNEL in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.
2. Press ENTER button to adjust.
3. After finishing your adjustment, press ENTER button to save and return to the previous menu.

### **Auto Tuning**

1. Press ▼ / ▲ button to select Auto Tuning, then press ENTER/ ▶ button to enter.



### **ATV Manual Tuning**

Press ▼ / ▲ button to select Manual Tuning and press ENTER button to show manual tuning list.  
Through ▼ / ▲ button, you are able to select channel number.  
You can also directly press number keys to select channel number, and then press ENTER button to start searching channel.



## Main Menu Operation

### Channel

#### ATV Manual Tuning



- Current CH  
Set the channel number.
- Color System  
Select the color system  
(Available System: AUTO, PAL, SECAM, NTSC)
- Sound System  
Select the Sound system
- Fine-Tune  
Adjust the frequency of the channel finely.
- Search  
Start searching channel.

#### DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press ENTER button to enter sub-menu.  
Press ◀ / ▶ button to select channel, then press ENTER button to search program.



#### Programme Edit



Press ▼ / ▲ button to select Programme Edit, then press ENTER button to enter sub-menu.  
The three colored key is the shortcut key for programming the channel.  
First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the selected program in the list.  
Press the **Yellow** button to move the channel in favorite list.  
Press the **Blue** button to skip the selected channel.  
Press FAV button to add or remove the channel to your favorite list.


(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

## Main Menu Operation

### Channel

#### Schedule List

Press ▼ / ▲ button to select Schedule List, then press Enter button to enter sub-menu. It is available in DTV source.

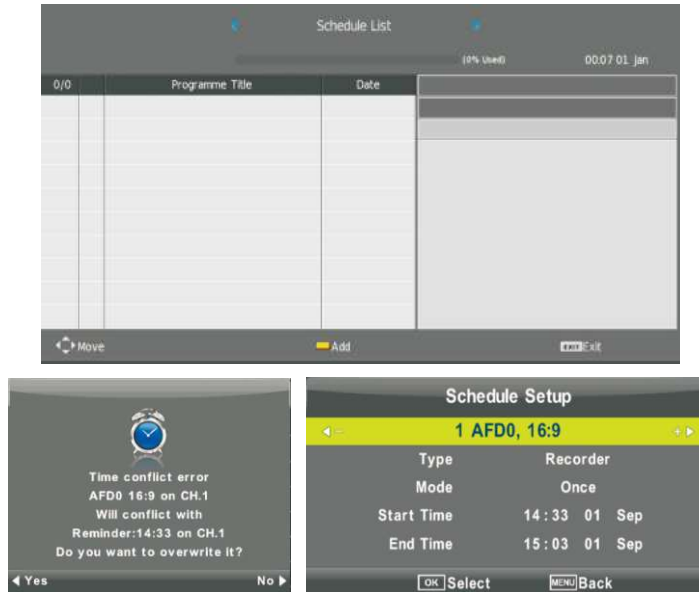

Press the YELLOW button to enter the interface below. When the time appointment is conflict, it will produce a warning message.

#### Signal Information


Press ▼ / ▲ button to select Signal Information, press the Enter button to see the detail informatiin about the signal. Only available when there is signal in DTV.



## Main Menu Operation

### Picture

Press **MENU** button to display the main menu.  
Press ◀ / ▶ button to select **PICTURE** in the main menu.

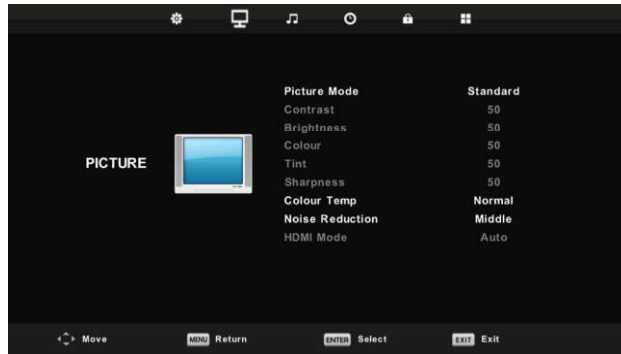

1. Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press ENTER button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

### Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press ENTER button to enter sub-menu.  
You can change the value of contrast, brightness, colour, sharpness and tint when the picture is in **Personal** mode.

TIPS: You can press PMODE button to change the Picture Mode directly.



### Contrast/ Brightness/ Colour/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

**Contrast** Adjust the highlight intensity of the picture, but the shadow of the picture is nvariable.

**Brightness** Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

**Colour** Adjust the saturation of the colour based on your own like.

**Tint** Use in compensating color changed with the transmission in the NTSC code.

**Sharpness** Adjust the peaking in the detail of the picture.

## Main Menu Operation

### Picture

#### Colour Temp

Change the overall color cast of the picture.

Press ▼ / ▲ button to select Colour Temperature, then press ENTER button to enter sub-menu.

Press ◀ / ▶ button to select. (Available Picture mode: Cold, normal, Warm).

You can change the value of red, green and blue when the colour temperature is in **User** mode.



- Cold** Increase the blue tone for the white.
- Normal** Increase the sex-linked colors for the white.
- Warm** Increase the red color for the white.

#### Noise Reduction

To filter out and reduces the image noise and improve picture quality.

Press ▼ / ▲ button to select Noise Reduction, then press ENTER button to enter sub-menu.



- Off** Select to turn off video noise detection.
- Low** Detect and reduce low video noise.
- Middle** Detect and reduce moderate video noise.
- High** Detect and reduce enhanced video noise.
- Default** Set as Default.

#### HDMI Mode

Press ▼ / ▲ button to select HDMI Mode, then press ENTER button to select the mode.

Press ◀ / ▶ button to select. (HDMI mode: Auto, video, PC).



## Main Menu Operation

### Sound


Press **MENU** button to display the main menu.  
Press ◀ / ▶ button to select **SOUND** in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press ENTER button to adjust.
3. After finishing your adjustment, press ENTER button to save and return to the previous menu.

### Sound Mode

Press ▼ / ▲ button to select Sound Mode, then press ENTER button to enter sub-menu.  
Press ▼ / ▲ button to select.

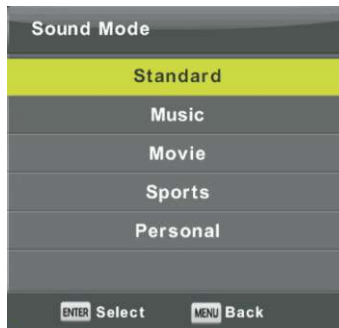

You can change the value of Treble and Bass when the sound is in Personal mode.  
TIPS: You can press **SMODE** button on the remote control to change the Sound Mode directly.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
Personal	Select to customize picture settings.

**Note:** The treble and bass are only available in **User** mode, you can adjust them as you like.

### Balance

Adjust the speaker's output, it enables you to listen to best at your position.  
Press ▼ / ▲ button to select option, press ◀ / ▶ button to adjust.

## Main Menu Operation

### Sound

#### Auto Volume level

Reducing the difference between channel and program's volume automatically.

Press ▼ / ▲ button to select Auto Volume Level, then press ◀ / ▶ button to select On or Off.

#### SPDIF Mode

Press ▼ / ▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM / Auto.

#### AD Switch

Press ▼ / ▲ button to select AD Switch, then press ◀ / ▶ button to select On or Off.

Amblyopia function for the blind, the tracks will be mixed describe the current screen.

It need code stream to support.

### Time

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **TIME** in the main menu.




1. Press ▼ / ▲ button to select the option that you want to adjust in the **TIME** menu.
2. Press ENTER button to adjust.
3. After finishing your adjustment, press ENTER button to save and return to the previous menu.

#### Clock

Press ▼/▲ button to select clock, then press ENTER button to enter sub-menu.

Press ▼/▲ button to select.

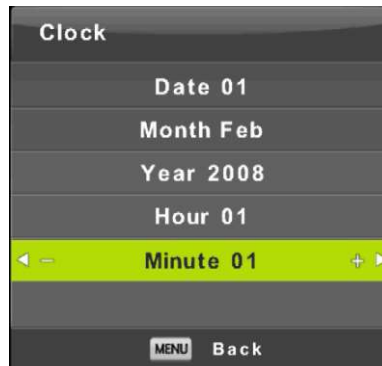


## Main Menu Operation

### Time


#### Time Zone

Press ▼ / ▲ button to select Time Zone, then press ENTER button to enter sub-menu.  
Press ▼/▲/◀/▶ button to select time zone.

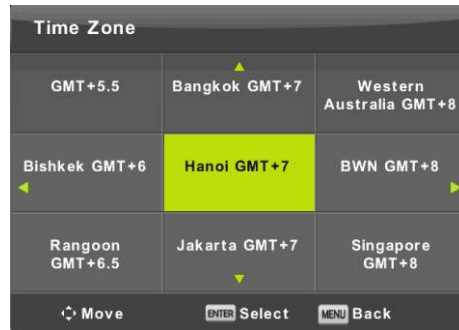

#### Sleep Timer

Press ▼ / ▲ button to select Sleep Timer, then press ENTER button to enter sub-menu.  
Press ▼ / ▲ button to select.  
(Available options are: Off, 15min, 30min, 45min, 60min, 90min, 120min, 240min).

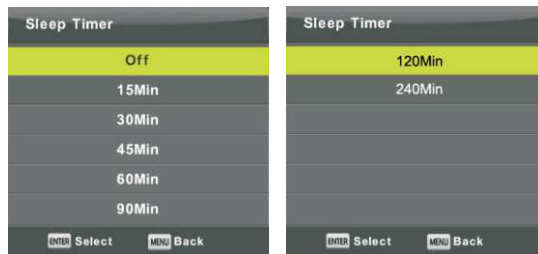

#### Auto Standby

Press ▼ / ▲ button to select Auto Standby, then press ENTER button to enter sub-menu.  
Press ▼ / ▲ button to select.

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset the time.

#### OSD Timer

Press ▼ / ▲ button to select OSD Timer, then press ENTER button to enter sub-menu.  
Press ◀ / ▶ button to select.



## Main Menu Operation

### Lock

Press **MENU** button to display the main menu.  
Press **◀ / ▶** button to select **Lock** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **LOCK SYSTEM** menu.
2. Press **ENTER/◀ / ▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

#### System Lock

Please remember that initial password is 2008.

Select System Lock with **▼ / ▲** button and then press **ENTER** button to select on/off to open or close the lock function



#### Set Password

Press **▼ / ▲** button to select Set Password, then press **ENTER** button to enter sub-menu to set new password.





## Main Menu Operation

### Lock

#### Channel Lock

Press ▼ / ▲ button to select Channel Lock then press ENTER button to enter sub-menu to select. Press Green button to lock or unlock the channel.



#### Parental Guidance

Press ▼ / ▲ button to select Parental Guidance, then press ENTER button to enter sub-menu to select the number of age which is suitable for your children.



#### Keyboard

Press ▼ / ▲ button to select Keyboard, then press ◀ / ▶ button to select Off or On. When Key Lock's statue is on, you can't use the Key panel button.

### Setup

Press MENU button to display the main menu. Press ◀ / ▶ button to select **SETUP** in the main menu.



## Main Menu Operation

### Setup

1. Press ▼ / ▲ button to select the option that you want to adjust in the SETUP menu.
2. Press ENTER button to adjust.
3. After finishing your adjustment, Press ENTER button to save and return to the previous menu.

#### Language

Select the language which is displayed on the OSD menu. Default language is English.  
Press ▼ / ▲ / ◀ / ▶ button to select Menu Language.

#### Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press ENTER button to enter sub-menu.  
Press ◀ / ▶ button to select the primary of Audio Languages.  
Press ▼ / ▲ / ◀ / ▶ button to select the Audio Languages.

#### Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press ENTER button to enter sub-menu.  
Press ◀ / ▶ button to select the primary of Subtitle Language.  
Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.

#### Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press ENTER button to select On or Off.

#### PVR File System

Press ▼ / ▲ button to select PVR File System, then press ENTER button to enter sub-menu.  
Press ▼ / ▲ button to select Check PVR File System, then press ENTER button to enter.  
Then it will check the USB speed.



#### Scale

Press ▼ / ▲ button to select Scale, then press ENTER button to enter sub-menu.  
Press ▼ / ▲ button to select Scale. (Available options are: Auto, 4:3, 16:9, Zoom1, Zoom2).

#### Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press ENTER button to select On or Off.

#### First Time Installation

Press ▼ / ▲ button to select First time installation, then press ENTER button to enter.

#### Reset

Press ▼ / ▲ button to select Reset, then press ENTER button to enter sub-menu.

#### Software Update(USB)


Press ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot, then press ENTER button to update the right software.

## Main Menu Operation

### Setup

#### HDMI CEC

Press **▼ / ▲** button to select HDMI CEC, then press ENTER button to enter the sub-menu.

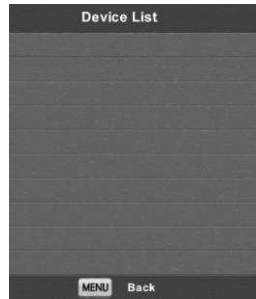

CEC Control

Audio Receiver

Device Auto Power Off

TV Auto Power Off

Device List

Device Menu

Press **◀ / ▶** button to turn the CEC Control on or off.

Press **◀ / ▶** button to turn the Audio Receiver on or off.

Like the audio receiver' method of operation.

Like the audio receiver' method of operation.

Press Enter button to open the list of device.

Press Enter button to open the main menu of device.

## Main Menu Operation

### Hotel

Select Hotel Mode with MENU+7906 button.

Press ENTER button on the remote control to enter the sub-menu.

Press ▼/▲ button to select Hotel Mode, then press ◀/▶ button to select on or off.



#### Source Lock

Press ▼/▲ button to select Source Lock, then press ENTER button to enter sub-menu to select.

#### Default Source

Press ▼/▲ button to select Default Source, then press ENTER button to enter sub-menu to select.

#### Default Prog

Press ▼/▲ button to select Default Prog, then press ◀/▶ button to adjust. It is available when the default source is TV.

#### Default Volume

Press ▼/▲ button to select Default Volume, then press ◀/▶ button to adjust.

#### Max Volume

Press ▼/▲ button to select Max Volume, then press ◀/▶ button to adjust.

#### Import Database

Press ▼/▲ button to select Import, then press ENTER button to import what you have set up into the database.

#### Export Database

Press ▼/▲ button to select Import, then press ENTER button to set up the Hotel Mode from the Import Database.

#### Clear Lock

Press ▼/▲ button to select Clear Lock, then press ENTER button to clear the setting you have done before.

## Media Operation

### USB

Press INPUT button to show Photo, Music, Movie, Text.  
Press ◀/▶ button to choose specific menu and the adjustable value.  
In their sub\_menu, choose menu item press with ▼/▲ or ◀/▶ button.

USB supports image format: JPG / PNG / BMP

USB supports music format: MP3 / AAC

USB supports video format: MPEG2 / MPEG4

USB supports Text format: TXT

Note: Before operating USB menu, Plug in USB device, then press INPUT button to set the Input Source to USB.

Press ▼ / ▲ button to select USB in the Source menu, then press ENTER button to enter.  
Press ◀ / ▶ button to select the option you want to adjust in the main Media menu, then press ENTER button to enter.



## Media Operation

### Photo Menu

Press ◀ / ▶ button to select PHOTO in the main menu, then press ENTER button to enter. Press Exit button to return to the previous menu and exit menu to quit.



Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture. When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.



Press ENTER button to play or pause.



Press ENTER button to view the previous picture.



Press ENTER button to view the next picture.



Press ENTER button to stop and back to the previous folder.



Press to select the repeat mode of playing pictures in the current folder. Press ENTER button to select repeat mode: Repeat1 / Repeat ALL / Repeat None.



Press ENTER button to stop and play the background music.



Press ENTER button to view the play list.



Press ENTER button to show the information of the current picture. (Resolution/Size/Date/Time)

## Media Operation

### Photo Menu



Press ENTER button to rotate clockwise the current picture.



Press ENTER button to rotate counterclockwise the current picture.



Press ENTER button to zoom the current picture in.




Press ENTER button to zoom the current picture out.



Press ENTER button, then press ▼ / ▲ / ◀ / ▶ to move the picture.

### Music Menu

Press ◀ / ▶ button to select MUSIC in the main menu, then press ENTER button to enter.  
Press Exit button to return to the previous menu and exit menu to quit.

 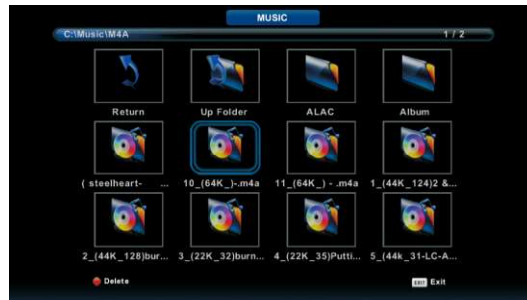












Press ◀ / ▶ button to select drive disk you want to watch, then press ENTER button to enter.  
Press ◀ / ▶ button to select return option to the previous menu.



## Media Operation

### Music Menu

	Press ENTER button to play or pause.
	Press ENTER button to fast back playing.
	Press ENTER button to fast forward playing.
	Press ENTER button to play the previous music.
	Press ENTER button to play the next music.
	Press ENTER button to stop and back to the previous folder.
	Press to select the repeat mode of playing music in the current folder. Press ENTER button to select repeat mode: Repeat1 / Repeat ALL / Repeat None.
	Press ENTER button to mute and cancel.
	Press ENTER button to view the play list.
	Press ENTER button to show the information of the current music. (Album/Title/Bit Rate/Artist/Sampling/Year/Size)
	Press to choose the play time.

### Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press ENTER button to enter.  
Press Exit button to return to the previous menu and exit menu to quit.



Press ◀ / ▶ button to select drive disk you want to watch, then press ENTER button to enter.  
Press media button to play the selected movie.  
Press display button to select menu in the bottom you want to run, then press ENTER button to operate.  
Press Exit button to back to the previous menu and exit button to quit the entire menu.



## Media Operation

### Movie Menu



Press ENTER button to play or pause.



Press ENTER button to fast back playing.



Press ENTER button to fast forward playing.



Press ENTER button to play the previous movie.



Press ENTER button to play the next movie.



Press ENTER button to stop and back to the previous folder.



Press ENTER button to select the character.



Press to select the repeat mode of playing movie in the current folder.  
Press ENTER button to select repeat mode: Repeat1 / Repeat ALL / Repeat None.



Set A-B to play repeatedly. Press once to set A, press again to set B, and press third time to cancel.



Press ENTER button to view the play list.



Press ENTER button to show the information of the current movie.  
(Resolution/Audio Track/Subtitle/Sync/Code page/Program/Size)



Press to play slow.



Press to play the movie step by step.



Press to choose the play time.



Press ENTER button to zoom the current movie in.



Press ENTER button to zoom the current movie out.

## Media Operation

### Movie Menu



Press ENTER button to select aspect ratio.(Zoom1/Zoom2/Auto/4:3/16:9)




Press ENTER button, then press ▼/▲/◀/▶ to move the movie.

### Text Menu

Press ◀/▶ button to select TEXT in the main menu, then press ENTER button to enter.  
Press Exit button to return to the previous menu and exit menu to quit.



Press ◀/▶ button to select drive disk you want to watch, then press ENTER button to enter.  
Press ◀/▶ button to select return option to the previous menu.

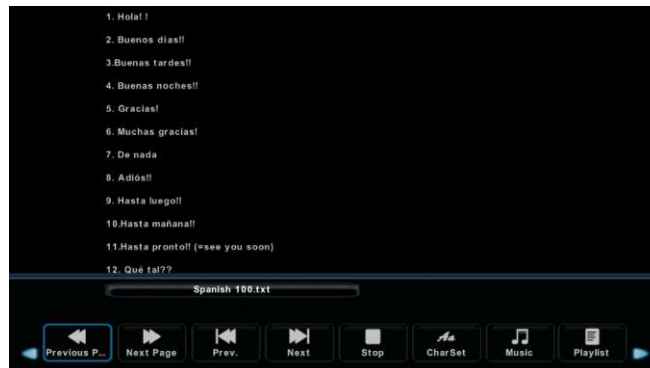

## Media Operation

### Text Menu



Press ENTER button to view the previous page.



Press ENTER button to view the next page.



Press ENTER button to play the previous text.



Press ENTER button to play the next text.



Press ENTER button to stop and back to the previous folder.



Press ENTER button to select the character.



Press ENTER button to stop and play the background music.



Press ENTER button to view the play list.

## Troubleshooting

If you have any problem, check the counter measures for each symptom listed below. The following symptoms may have been caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the Customer Care Centre, see back page for contact details.

Symptoms	Possible solutions
No power	Please check the power cord plugged in and that the power outlet works. Unplug the power cord and plug it in after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may be experiencing problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press MUTE button on the remote control. Please check sound settings If external devices are being used, check their volumes are not set too low or turned off. If using DVI to HDMI cable, a separate audio cable is required. Make sure a headphone jack is not connected..
Good sound but abnormal color or no picture	Please check antenna connection and antenna condition. If using Component input, please check Component connections, incorrect or loose connections may cause colour problems or cause the screen to be blank.
No response to remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LED TV and remote control should be within 8m, within recommended operating angle and path is free of obstructions.
Full screen flickering under VGA	V-HEIGHT value may be set too big, restart computer and enter safe mode, then set monitor parameters to correct value according to adjustment description.
Horizontal stripes under VGA	Sample phase may be deflected, adjust phase according to picture position.
Colored dots may be present on the screen	Although the LED screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LED screen. This is a structural property of the LED screen and not a malfunction.
Picture is breaking up	Keep the TV away from noisy electrical sources such as cars, hair dryers, welders, and all optional equipment. Electrical atmospheric interference such as local or distant lightning storms may cause picture to break up. When installing optional equipment, leave some space between the optional equipment and the TV. Check the antenna and connection. Keep the antenna away from any power or input/output cables.

## Troubleshooting

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings. It is available when the TV has channel block function.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Sleep Timer may have been enabled. If there is no signal for about 15 minutes from an input, the TV will turn off. If connected to your PC, check your PC power settings. Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

## WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**STEN**